




INSTALLATION EXAMPLE

A-FLEX / A-ECO BOLLARD

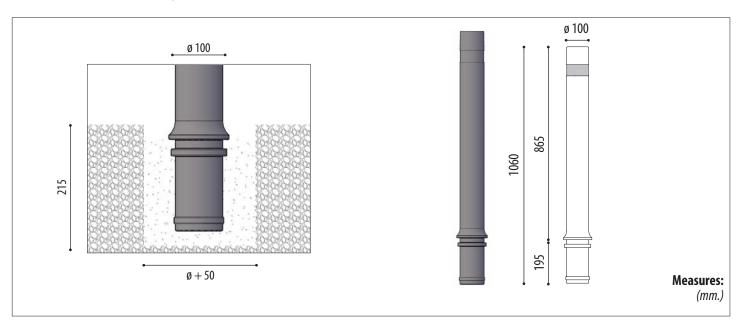

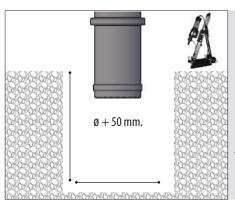


1. Perform a hole for the bollard installation. Preferably with diamond bit drill, if it is not possible to use jackhammer or rotary.

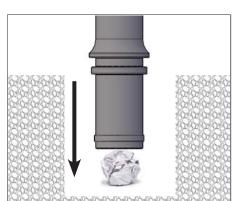


Put newsprint into the hollow bottom of the bollard in order to avoid concrete entry in the inside.

2.

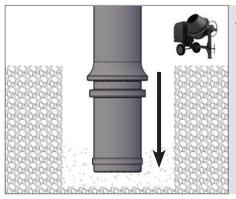

3. Introduce the bollard inside the hole and fill it with concrete.

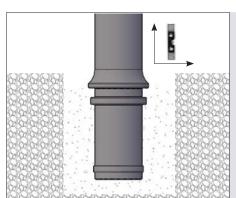

4. Level the bollard correctly.



www.adourbanfurniture.com

+34 93 116 29 75 (International) +34 93 456 03 03 (Spanish)

✓ info@adourbanfurniture.com