



# INSTALLATION EXAMPLE

## SCREW A-BLEN Ø100 BOLLARD


### ● INCLUDES:



1 ut.  
Screw A-Blen bollard




1 ut.  
Anchorage (included)

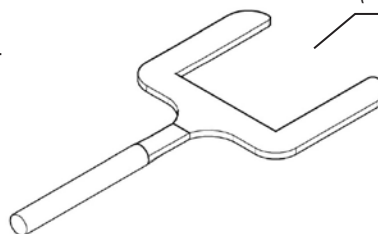


OPTIONAL:  
Key to fix the bollard  
(not included)

### ● INSTALLATION:

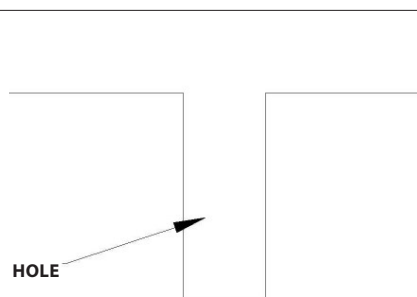

HOLE

1. Make a hole in the ground in order to place the anchorage.

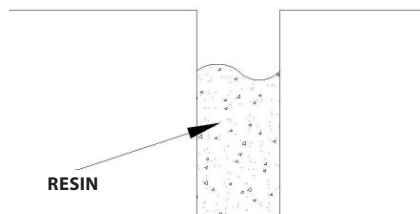

RESIN


2. Fill the hole you have made with Epoxi resin (not included).



ANCHORAGE


RESIN

3. Put the anchorage in the hole.

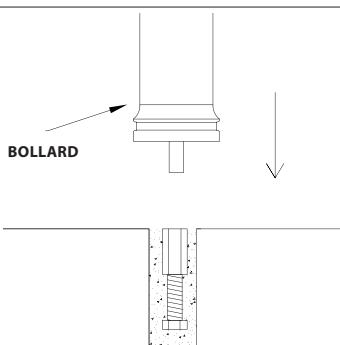

BOLLARD

4. Let the resin dry and then you can screw the bollard.

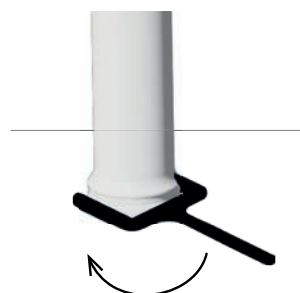

5. Screw the bollard with the help of the key.

Ref. LLBLENT



[www.adourbanfurniture.com](http://www.adourbanfurniture.com)



+34 93 116 29 75 (International) | +34 93 456 03 03 (Spanish)



[info@adourbanfurniture.com](mailto:info@adourbanfurniture.com)