




- 1.**
Unscrew HA75 bollard's female anchor for subsequent ground installation.

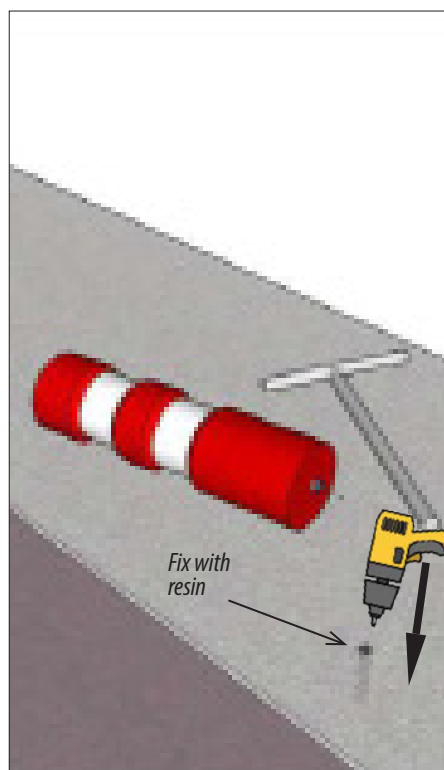

- 2.**
Drill into the ground to install an M-11 female anchor. Fix with resin to the ground.

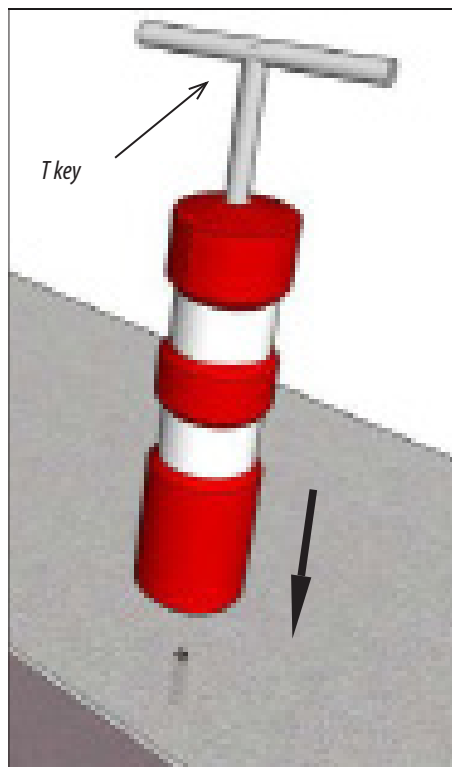

- 3.**
Anchor the bollard by means of an inner screw, then use the specific key to screw it.

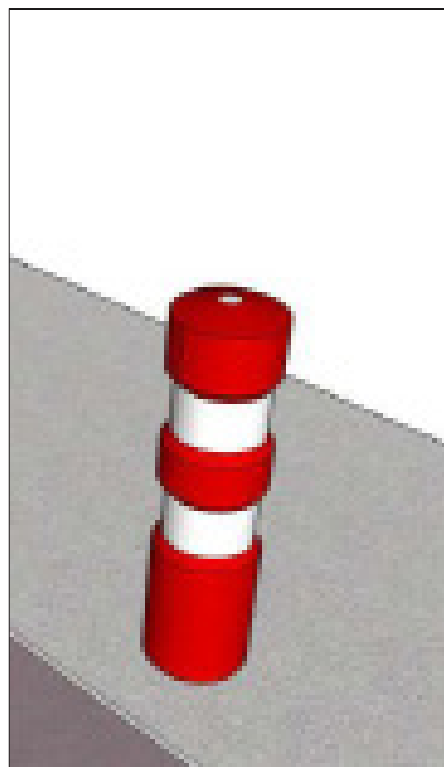

- 4.**
Final view