



INSTRUCTIONS

PANTERA CYCLE LANE SEPARATOR

● INCLUDE:



Place the spacer with the screws (rod + nut + washer)
Ref. PANTERATOR




Resin
Ref. RS400


● INSTRUCTIONS:

- Place the spacer in the desired place and drill with a $\varnothing 14$ mm drill. to the depth indicated for each fixing.
- Remove the separator and clean the residue holes.
- Fill approximately 2/3 of the holes with resin **Ref. RS400**
- Place the spacer with the screws (rod + nut + washer). **Ref. PANTERATOR**
- Wait for the resin to dry and adjust the spacer with the nut.

● FIXATION

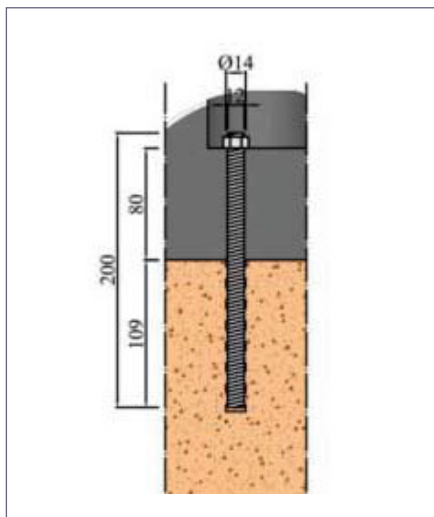

Fixings in the center of the separator.

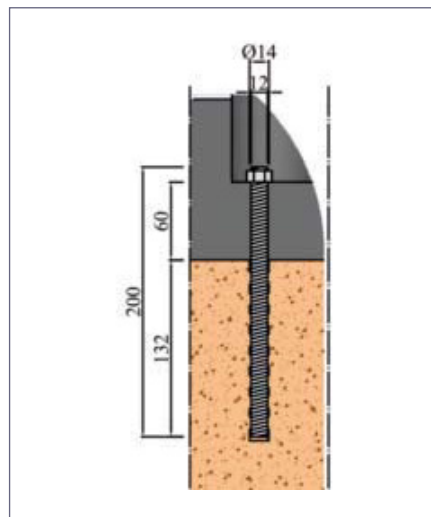

Separator end fixings.



www.adourbanfurniture.com



+34 93 116 29 75 (International) | **+34 93 456 03 03** (Spanish)



info@adourbanfurniture.com