



# INSTRUCTIONS

## PITON CYCLE LANE SEPARATOR

### ● INCLUDE:



Place the spacer with the screws (rod + nut + washer)  
**Ref. PANTERATOR**




Resin  
**Ref. RS400**


### ● INSTRUCTIONS:

- Place the spacer in the desired place and drill with a  $\varnothing 14$  mm drill. to the depth indicated for each fixing.
- Remove the separator and clean the residue holes.
- Fill approximately 2/3 of the holes with resin **Ref. RS400**
- Place the spacer with the screws (rod + nut + washer). **Ref. PANTERATOR**
- Wait for the resin to dry and adjust the spacer with the nut.

### ● FIXATION

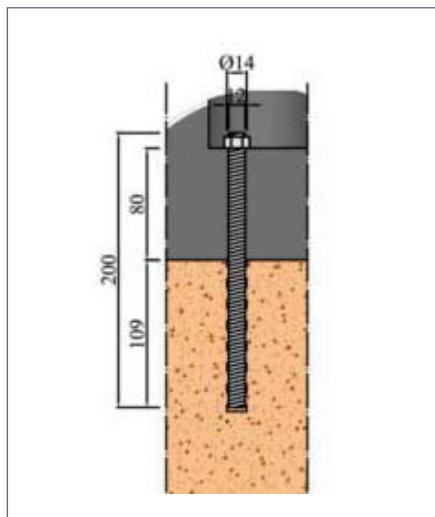

*Fixings in the center of the separator.*

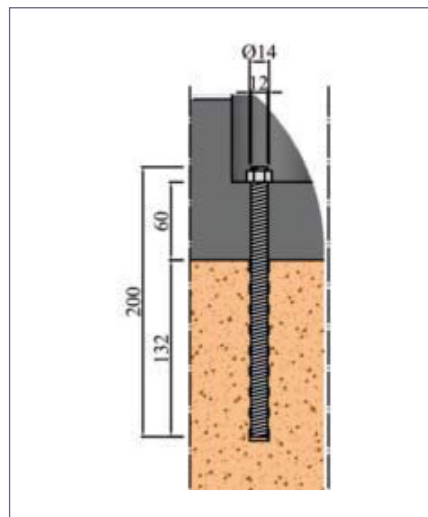

*Separator end fixings.*



**www.adourbanfurniture.com**



**+34 93 116 29 75** (International) | **+34 93 456 03 03** (Spanish)



**info@adourbanfurniture.com**