

INSTRUCTIONS

SNAKE CYCLE LANE SEPARATOR

● INCLUDE:



Place the spacer with the screws (rod + nut + washer)
Ref. PANTERATOR




Resin
Ref. RS400


● INSTRUCTIONS:

- Place the spacer in the desired place and drill with a \varnothing 14 mm drill. to the depth indicated for each fixing.
- Remove the separator and clean the residue holes.
- Fill approximately 2/3 of the holes with resin. **Ref. RS400**
- Place the spacer with the screws (rod + nut + washer) **Ref. PANTERATOR**
- Wait for the resin to dry and adjust the spacer with the nut.

● FIXATION:

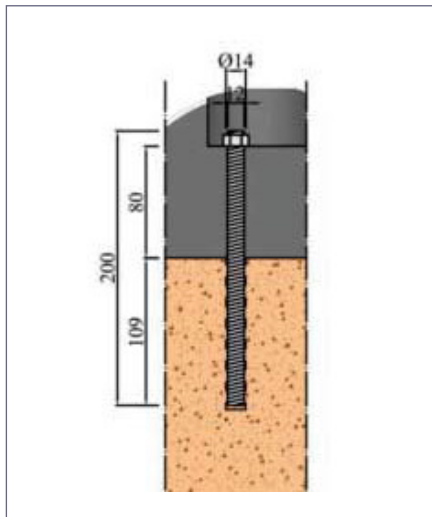

Fixings in the center of the separator.

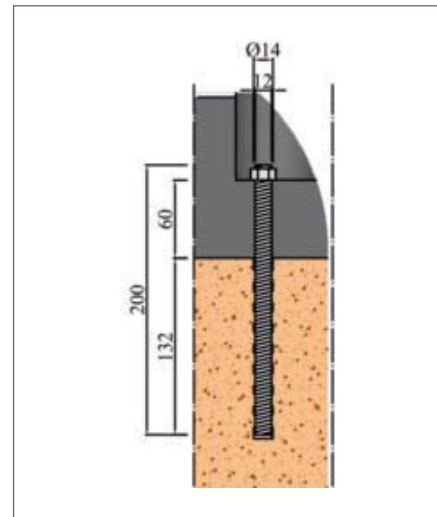

Separator end fixings.