




**Speed reducer / Berlin concrete cushion** built in monobloc pieces for easy and quick installation on site with a lifting crane.

Being built in prefabricated concrete, it integrates perfectly with the asphalt of the street.

It consists of triangles painted in yellow.

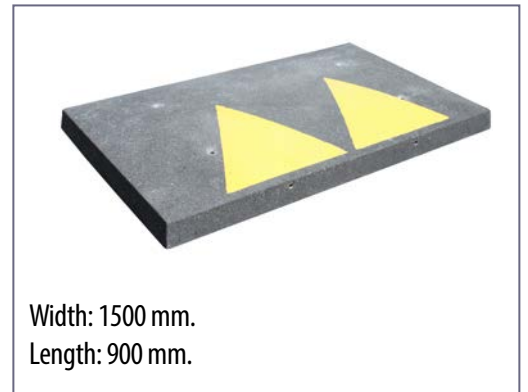

## INSTALLATION:



Mark surface.



Cut surface.



Chop the surface.



Clean surface.



Fill surface with concrete.



Install the monobloc piece.